



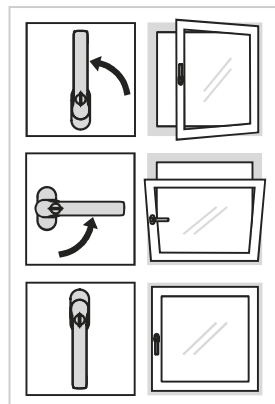

Gælder for produktkoder:
BG, BM, BO, OD, OS, TA, TD, TG, TM, TO, TQ, TW, TY, VG, VN, VO, ZD, ZS




Betjeningsvejledning for vrider med nøkkel (låst ved 90°, TBT1)

Full åpning (vaskestilling 180°)

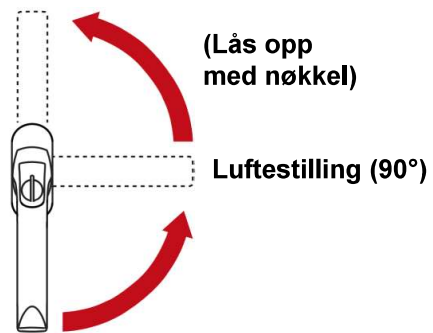

Operating instruction for handle with key (locked at 90°, TBT1)

Opening position (180°)

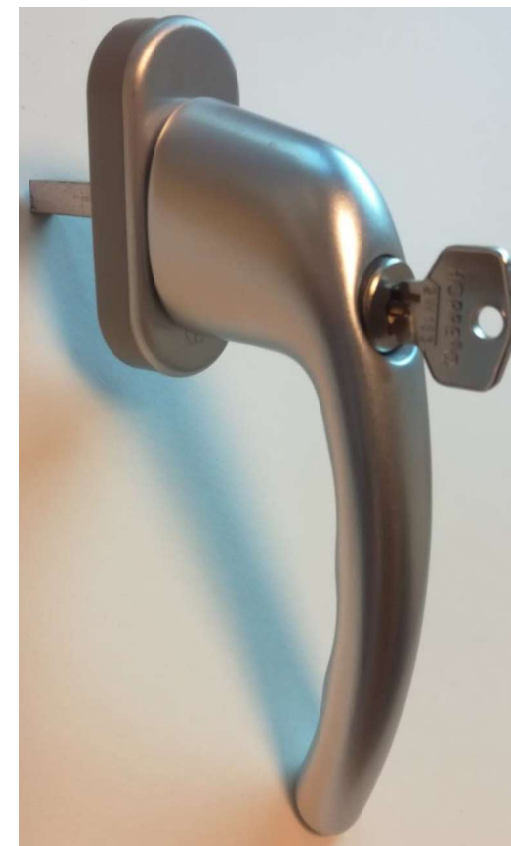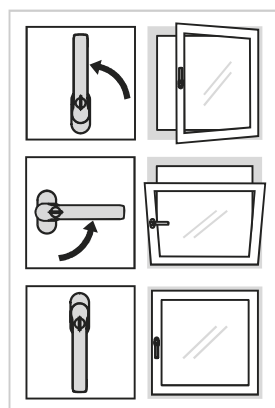
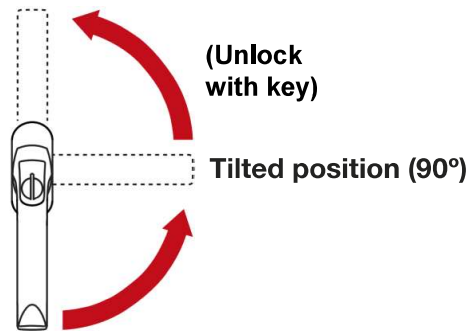




Gælder for produktkoder:
BG, BM, BO, OD, OS, TA, TD, TG, TM, TO, TQ, TW, TY, VG, VN, VO, ZD, ZS

Betjeningsvejledning for vrider med nøgkel (låst ved 0°)



Full åpning (vaskestilling 180°)

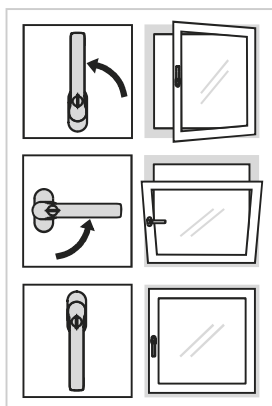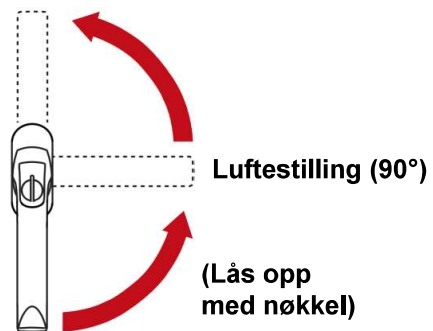

Låst posisjon (0°) (Trykk knappen må være aktivert)

Operating instruction for handle with key (locked at 0°)

Opening position (180°)

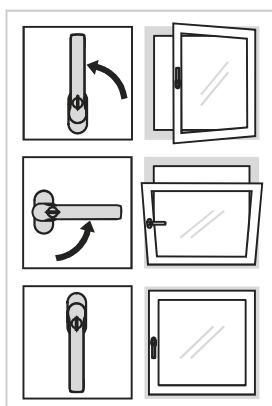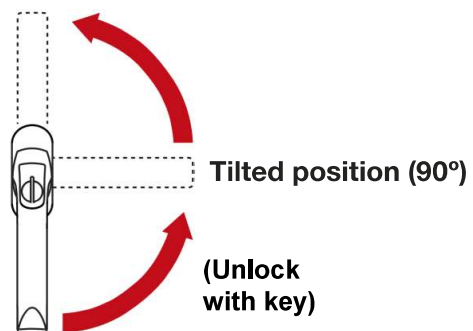

Locked position (0°) (The push button must be activated)

Prod. Dev. Dept.
09.02.2021
Ingmar Omdal

