



## Monteringsanvisning

### Klargöring för montering av låse system:

1. Lås opp døren med en skrutrekker e.l.
2. Åpne døren.
3. Legg begge vriderne til side.
4. Sett låseenheten i espagnoletten i posisjonen slik figur «A» viser (1).

### For dobbel cylinder:

1. **Ta ut nøkkelen fra sylinderen.** Monter innvendig sylinder og sylinderforlenger (2) til utvendig sylinder og sylinder-forlenger (2). Skrues fra innsiden.
2. Monter vrider utvendig og innvendig med vrider rett ned i åpen stilling. Skrues fra innsiden.

### For utvendig sylinder med innvendig knappvrider:

1. **Ta ut nøkkelen fra sylinderen.** Monter utvendig sylinder og sylinderforlenger (2) til innvendig stoppskive (3) med 5 x 40mm skruer.
2. Monter svart plasthylse (4) på firkantpinnen/knappvrideren.
3. Monter vrider utvendig og innvendig med vrider rett ned i åpen stilling. Skrues fra innsiden.

### Test:

1. Lukk døren og steng vrider slik at den peker rett oppover.
2. Prøv låsen ved å vri nøkkel/knappvrider til låst og åpen stilling.
3. Alle skruene tiltrekkes med fornuftig moment slik at bevegelige deler går lett og fint. Monteringen er nå fullført.

## Fitting Instructions

### Preparation before fitting the locking system:

1. Unlock the door with a screwdriver or similar.
2. Open the door.
3. Put both handles aside.
4. Insert the locking unit into the espagnolette in the position as shown in figure «A» (1).

### For double cylinder:




1. **Remove key from cylinder.** Fit the internal cylinder and cylinder extension (2) to the external cylinder and cylinder extension (2). Screwed from the inside.
2. Fit the handle on the outside and inside with the handle straight down in the open position. Screwed from the inside.

### For external cylinder with internal handle:

1. **Remove key from cylinder.** Fit the external cylinder and cylinder extension (2) to the inner stop disc (3) with 5 x 40mm screw.
2. Fit the black plastic sleeve (4) on the square pin/thumbturn.
3. Fit the handle on the outside and inside with the handle straight down in the open position. Screwed from the inside.

### Test:

1. Close the door and close the handle so that it points straight up.
2. Try the lock by turning the key/handle to the locked and open position.
3. All screws are tightened with reasonable torque so that moving parts run easily and smoothly. The assembly is now complete.

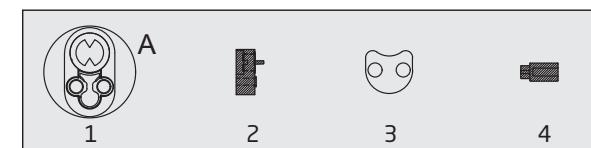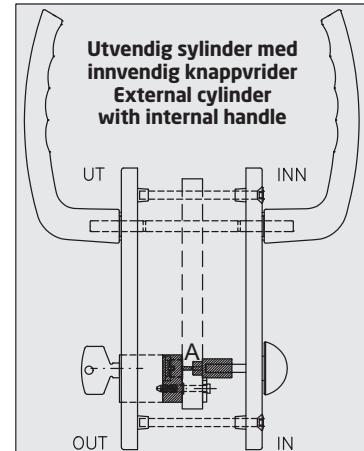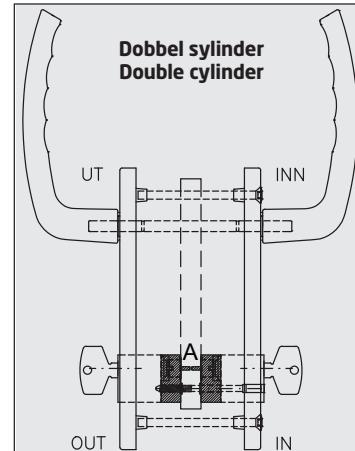

**NB! Vrider må ikke stenges når døren er i åpen posisjon.**

**NB! The handle must not be closed when the door is in the open position.**